


Pump Tank Maintenance

If you have a time dose control panel similar to the below image, you will have a disc filter installed under the green poly lid that will need to be cleaned every 6 months for proper operation of your wastewater treatment system.



The light will illuminate on the control panel and the alarm will sound if the water level is too full. If your alarm is going off and the light is on, the disc filter will need to be cleaned. Follow the steps below for proper cleaning instructions.

1. Open the control panel and turn the toggle switch to OFF.

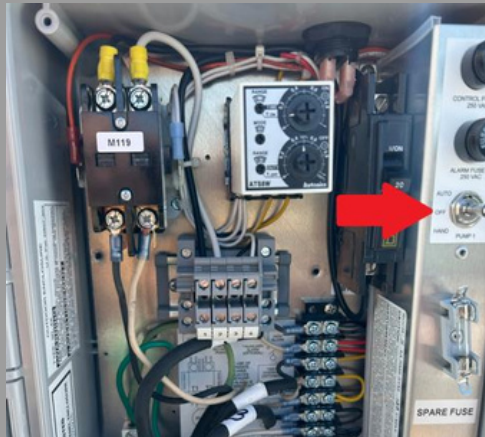


2. Remove the green lid



- Loosen the nut on the filter housing using the provided wrench (originally zip tied to the Uni- strut). Once removed, the filter is inside the canister. Be sure to not drop or lose any of the components.



- Clean the disc filter with a garden hose and remove any debris and/or buildup from the filter.

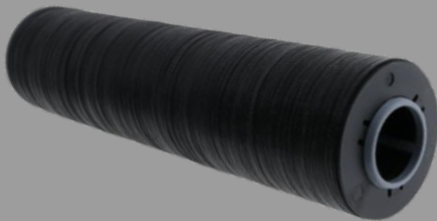

- Once the filter is cleaned, place it back into the housing the same way it was taken out and tighten the nut.
- Re-install the green poly lid and secure.
- Turn the control panel toggle switch to AUTO.

